
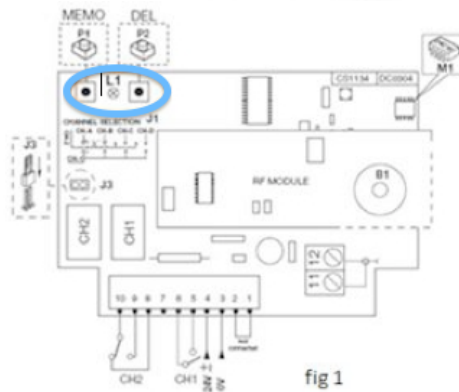


Yo  
f  
NOV

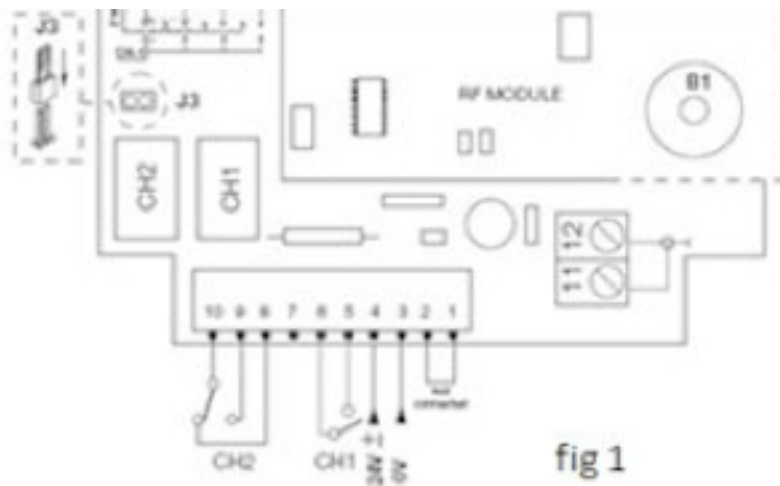

Please note: if you keep the programming button of your receiver pressed down too long, you will erase the programming code of all of your remote controls that have already been programmed

[How to Program your new remote control:](#)

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button and let it go (ENR, MEMO, PROG, REC... according to the model)
3. The LED light on the receiver illuminates or blinks.
4. Press a button on your new remote control for 1 second.
5. Let the button go. The LED light on the receiver turns off immediately or in the following 10 seconds according to the model.
6. Your new remote control is programmed.